

















































 







Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/VCR	 Smart / List
 0	 0
 CM-Skip	 Display / Media
 REC / ITR	 Rec / Rec Mode
 Eject	 Eject / Surround
 Play	 Play / Slow
 << REW	 << / Tune-

Original	Sustituto
 << REW	 I<< / Preset-
 >> F FWD	 >> / Tune+
 >> F FWD	 >>I / Preset+
 Pause/Still	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Left	 Left
 Up	 Up
 Right	 Right
 Down	 Down
 Clear	 Exit / Cancel / Clear
 OK / CLK / CNT	 OK
 i	 Info / Angle
 LP	 Text / Goto
 AV	 AV / Input / RDS
 C.Lock	 TV/Radio /

 





Original	Sustituto	
On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
F.Adv		Sound / Title
Audio		Audio / Lang I/II
Case Tape		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Sleep		Sleep / Timer
Progr/C/CH		TV/Radio /


Original	Sustituto	
Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Tracking+		CH+ / Page+
Slow/Dpss-		Vol-
Display		Display / Media
Tracking-		CH- / Page-



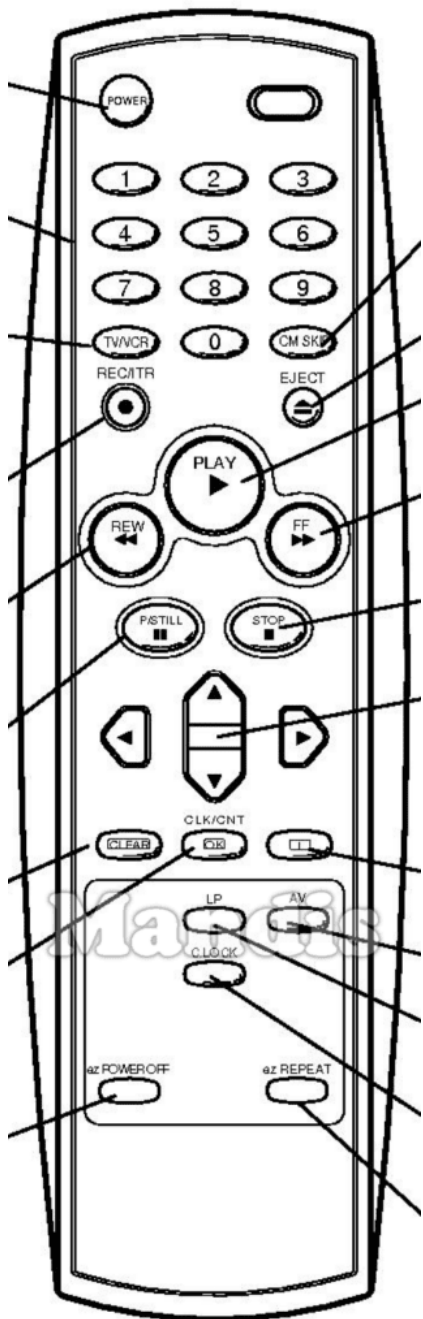





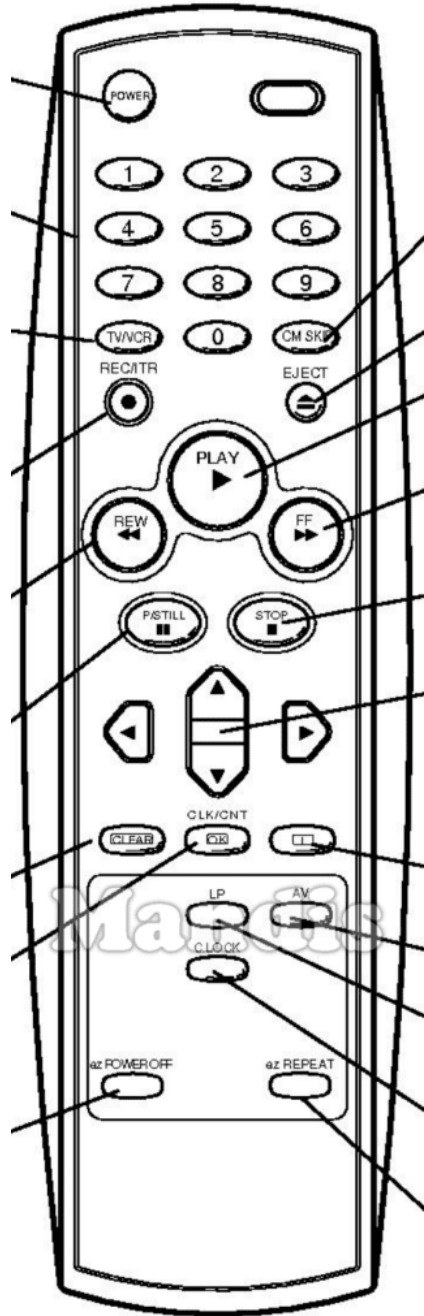
















 





Original	Sustituto	Original	Sustituto
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
-/--	 Guide / EPG / -/--		
0	 0		
Ch.Memo	 Fav / Marker / PC		
Repeat	 Green / APP / Repeat		
Slow Down	 Shift + Play /		
Clear 00:00	 Shift + Exit / Cancel / Clear		
Index Pict+	 Shift + CH+ /		
Index Pict-	 Shift + CH- /		












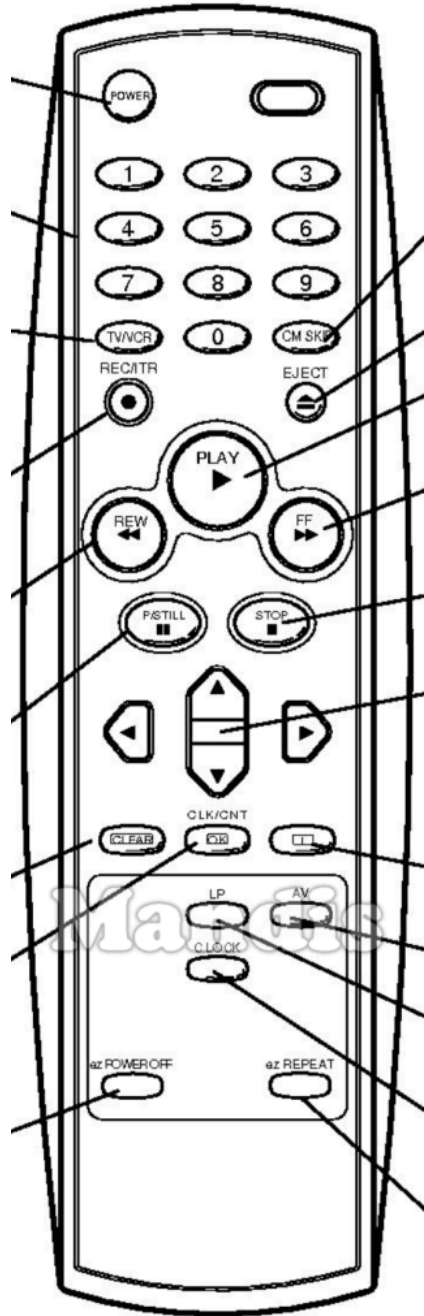







 














 
 

 
Original	Sustituto	
On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Audio Dub		Sound / Title
Audio		Audio / Lang I/II
Rec/Mode		Subtitle / EQ
Eject/Reverse		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Record		Sleep / Timer

Original	Sustituto	
Progr/C/CH		TV/Radio /
Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Show View		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
F.Adv		Back / Return
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Chan+		CH+ / Page+





Original	Sustituto	
Slow/Dpss-	 Vol-	
Display	 Display / Media	
Chan-	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
-/--	 Guide / EPG / -/--	
0	 0	
Ch.Memo	 Fav / Marker / PC	
Counter Clock	 Red / Netflix / Search	
Count Remain	 Green / APP / Repeat	

Original	Sustituto	
Counter Stop	 Yellow / YouTube / Repeat	
Counter Reset	 Blue / Prime Video / Random	
Slow Down	 Shift + Play /	
Rec. On/Off	 Shift + Rec / Rec Mode	
X2 Rew/Play	 Shift + << /	
Frame Down	 Shift + I<< / Preset-	
Frame Up	 Shift + >>I / Preset+	
Index Pict+	 Shift + Up	
Set-	 Shift + Left	
Set+	 Shift + Right	
Index Pict-	 Shift + Down	
Otr/A.Otr	 Shift + Smart / List	
Tracking+	 Shift + CH+ /	
Vps/Pdc	 Shift + Display / Media	
Tracking-	 Shift + CH- /	
Search Index	 Shift + Red / Netflix /	

