











 

 

 

 



 
 










 









 

 









 











 



Original	Sustituto	Original	Sustituto
 Auto Memory	 Green / APP / Repeat	 9	 9
 Memory	 Red / Netflix / Search	 Sound	 Sound / Title
 Power Receiver	 Power	 +10	 Guide / EPG / -/-
 PTY	 Info / Angle	 0	 0
 Display	 Display / Media	 HDMI Setup	 Menu / Home
 Virtual	 Smart / List	 Setup	 Setup / OPT /
 Active EQ	 Subtitle / EQ	 Listen Mode	 Blue / Prime Video / Random
 1	 1	 Pure Audio	 Yellow / YouTube / Repeat
 2	 2	 Multi Control	 CH- / Page-
 3	 3	 Multi Control Up	 CH+ / Page+
 Bass Boost	 Eject / Surround	 Volume+	 Vol+
 4	 4	 Volume-	 Vol-
 5	 5	 Band	 TV/Radio /
 6	 6	 Auto/Mono	 Audio / Lang I/II
 Tone	 Text / Goto	 Mute	 Mute / Dimmer
 7	 7	 P.Call-	 I<< / Preset-
 8	 8	 P.Call+	 >>I / Preset+







Original	Sustituto
 Power DVD	 Power
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up

Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 On Screen	 Display / Media
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

