



 

 

 
Original	Sustituto
Power	Power
Power Tv	Shift + Power
CH+ Tv	Shift + CH+ /
Volume+ Tv	Vol+
Direct Tv Rec	Shift + TV/Radio / Program
AV Tv	Shift + AV / Input / RDS
CH- Tv	Shift + CH- /
Volume- Tv	Vol-
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7

Original	Sustituto
8	8
9	9
ShowView	Zoom / Size
Cancel	Exit / Cancel / Clear
0	0
Input Select	AV / Input / RDS
Manual Skip	Shift + Display / Media
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Direct Navigator/Top	D.Menu / Top
Up	Up
Functions	Setup / OPT /





Original	Sustituto
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Back / Return
	 TV/Radio /
	 Display / Media
	 Picture / Format
	 Blue / Prime Video / Random
	 Rec / Rec Mode
	 Shift + Rec / Rec Mode
	 Smart / List
	 Sleep / Timer
	 Audio / Lang I/II
	 Green / APP / Repeat
	 Red / Netflix / Search

Original	Sustituto
	 Subtitle / EQ
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4

