



Original	Sustituto
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Back / Return
	AV / Input / RDS
	CH- / Page-
	CH+ / Page+
	Mute / Dimmer

Original	Sustituto
	Vol-
	Vol+
	Display / Media
	Smart / List

