 


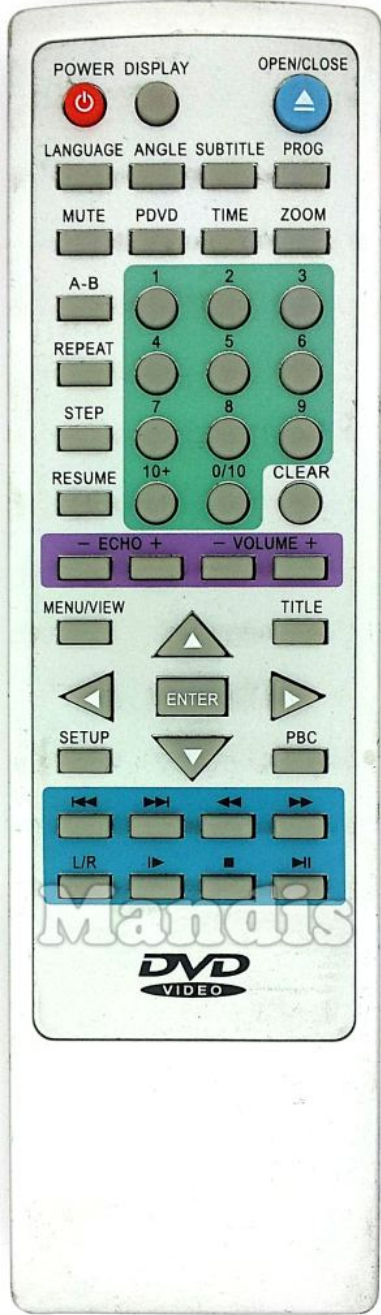



 



 





 









 



| Original   | Sustituto                 |
|------------|---------------------------|
| Power      | Power                     |
| Display    | Display / Media           |
| Open/Close | Eject / Surround          |
| Language   | Audio / Lang I/II         |
| Angle      | Info / Angle              |
| Subtitle   | Subtitle / EQ             |
| Prog       | TV/Radio /                |
| Mute       | Mute / Dimmer             |
| PDVD       | AV / Input / RDS          |
| Time       | Sleep / Timer             |
| Zoom       | Zoom / Size               |
| A-B        | Yellow / YouTube / Repeat |
| 1          | 1                         |
| 2          | 2                         |
| 3          | 3                         |
| Repeat     | Green / APP / Repeat      |
| 4          | 4                         |

| Original  | Sustituto              |
|-----------|------------------------|
| 5         | 5                      |
| 6         | 6                      |
| Step      | Shift + Pause / Step / |
| 7         | 7                      |
| 8         | 8                      |
| 9         | 9                      |
| Resume    | Smart / List           |
| 10+       | Guide / EPG / -/-      |
| 0/10      | 0                      |
| Clear     | Exit / Cancel / Clear  |
| Echo-     | CH- / Page-            |
| Echo+     | CH+ / Page+            |
| Volume-   | Vol-                   |
| Volume+   | Vol+                   |
| Menu/View | Menu / Home            |
| Up        | Up                     |
| Title     | Sound / Title          |





| Original  | Sustituto   |
|---|---|
|    |  Left                    |
|    |  OK                      |
|    |  Right                   |
|    |  Setup / OPT /           |
|    |  Down                    |
|    |  Picture / Format        |
|    |  I<< / Preset-           |
|    |  >>I / Preset+           |
|    |  << / Tune-              |
|    |  >> / Tune+              |
|   |  Text / Goto            |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold           |
|  |  Play / Slow           |

| Original | Sustituto |
|----------|-----------|
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |

