



Original	Sustituto
 Standby	 Power
 Auto / Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Back	 Back / Return
 Vol+	 Vol+
 Title	 Shift + Sound / Title
 Menu	 D.Menu / Top

Original	Sustituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 LCD Menu	 Menu / Home
 Down	 Down
 DVD Setup / Exit	 Setup / OPT /
 DVD Setup / Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow






Original	Sustituto
Stop	Stop / Hold
Slow / Step	Shift + Play /
Slow / Step	Shift + Pause / Step /
Audio / Nicam	Audio / Lang I/II
Text / <<	Text / Goto
Text / <<<	<<< / Tune-
>> / Mix	>> / Tune+
Hold / Goto	Shift + Text /
Hold / Goto	Shift + Stop /
Subpage /	Info / Angle
I<< / Index	I<< / Preset-
>>I / Size	Shift + Zoom /
>>I / Size	>>I / Preset+
Reveal / Zoom	Zoom / Size
Picture / Subtitle	Shift + Picture / Format
Picture / Subtitle	Subtitle / EQ
Red / Program	Red / Netflix / Search

Original	Sustituto
Red / Program	TV/Radio /
Green / Intro	Green / APP / Repeat
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP /
Blue / A-B	Blue / Prime Video / Random
Blue / A-B	Shift + Yellow / YouTube /





Original	Sustituto
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 S.Mode
	 Audio/Reveal
	 Zoom/Subpage
	 P.Mode
	 Size
	 Sleep / Timer
	 D.Menu / Top
	 Text / Goto

Original	Sustituto
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2





Original	Sustituto
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	GUIDE EPG
0	0
AUTO EJECT	PC FAV MARKER
PROGRAM	NETFLIX SEARCH
INTRO	APP REPEAT
REPEAT	YouTube REPEAT A-B
AB	Prime Video RANDOM
Hold	SHIFT + HOLD
Title	SHIFT + TITLE SOUND
Nicam	SHIFT + LANG I/II AUDIO

Original	Sustituto
Aspect	SHIFT + FORMAT PICTURE
D.Subt.	SHIFT + SIZE ZOOM
Goto	SHIFT + GOTO TEXT
Angle	SHIFT + ANGLE INFO
Slow/PgUp	SHIFT + + CH PAGE
D.Disp	SHIFT + MEDIA DISPLAY
Step/PgDn	SHIFT + - CH PAGE

