



Original	Sustituto
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
Tv Audio	Shift + 1
Blu-ray	Shift + 4
AUX1	Shift + 5
Tuner	Shift + 6
Bluetooth	Shift + 9
AUX2	Shift + 7
Game	Shift + Guide / EPG / -/-
Phono	Guide / EPG / -/-
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Heos	Shift + Fav / Marker / PC
Internet Radio	Smart / List
CH/Page+	CH+ / Page+

Original	Sustituto
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Eco	D.Menu / Top
Volume-	Vol-
Info	Info / Angle
Up	Up
Option	Shift + Setup / OPT / Tools
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
Home	Menu / Home
Stop	Stop / Hold





Original	Sustituto
	Pause / Step / Freeze
	Play / Slow
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Eject / Surround
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	1
	2
	3

Original	Sustituto
	4
	5
	6
	7
	8
	9
	0
	Enter
	4
	5
	6
	7
	8
	9
	0
	Fav / Marker / PC





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + Fav / Marker / PC
 Internet Radio	 Smart / List
 CH/Page+	 CH + / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Sustituto	Original	Sustituto
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Sound / Title
	Smart Select 2		Audio / Lang I/II
	Smart Select 3		Subtitle / EQ
	Smart Select 4		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Fav / Marker / PC








 







Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + Fav / Marker / PC
 CH/Page+	 Smart / List
 CH/Page+	 CH + / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-





Original		Sustituto		Original		Sustituto	
	>>		>> / Tune+				
	Smart Select 1		Sound / Title				
	Smart Select 2		Audio / Lang I/II				
	Smart Select 3		Subtitle / EQ				
	Smart Select 4		Eject / Surround				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Enter		OK				
	Enter		Fav / Marker / PC				

