



Original	Sustituto
 Power	 Power
 Recall	 Back / Return
 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS
 Red/Counter	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Green/Counter	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 Yellow	 Yellow / YouTube / Repeat
 Viss >>I	 >>I / Preset+
 7	 7
 8	 8
 9	 9

Original	Sustituto
 Blue	 Blue / Prime Video / Random
 I<< Viss	 I<< / Preset-
 ShowView	 Smart / List
 0	 0
 A.TRK	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Vol/V-Lock Up	 Vol+
 PR/TRK/Page Up	 CH+ / Page+
 Clear	 Exit / Cancel / Clear
 Vol/V-Lock	 Vol-
 PR/TRK/Page	 CH- / Page-
 Normal	 TV/Radio /
 Menu	 Menu / Home
 Up	 Up
 Play	 Play / Slow
 [=]	 Text / Goto
 Left	 Left





Original	Sustituto	Original	Sustituto
 Rew	 << / Tune-		
 [=i]	 OK		
 Stop	 Stop / Hold		
 Right	 Right		
 FF	 >> / Tune+		
 Rec/OTR[=+]	 Rec / Rec Mode		
 Pause/Still	 Pause / Step / Freeze		
 Down	 Down		
 [=♦]	 Zoom / Size		
 Eject	 Eject / Surround		

