



Original	Sustituto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Menu / Home
	>> / Tune+
	Exit / Cancel / Clear
	I<</ Preset-
	Stop / Hold
	>>I / Preset+
	Setup / OPT /
	<< / Tune-
	7
	Sound / Title
	Display / Media
	Power
	Vol-

Original	Sustituto
	Vol+

