



 







 

 


 









 




 





Original	Sustituto
 Power	 Power
 Input	 AV / Input / RDS
 Menu	 Menu / Home
 Picture	 Picture / Format
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix / Search
 prime video	 Shift + Blue / Prime Video / Random
 Left	 Left
 Up	 Up
 Right	 Right

Original	Sustituto
 Rakuten Tv	 Display / Media
 OK	 OK
 Back	 Back / Return
 Down	 Down
 Home	 Shift + Home / Menu
 Mute	 Mute / Dimmer
 Option	 Setup / OPT /
 Guide	 Guide / EPG / -/-
 List	 Shift + Smart / List
 Vol+	 Vol+
 Smart Colors	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3





Original	Sustituto	Original	Sustituto
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	?/eHelp		Audio / Lang I/II
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	My APP		TV/Radio /
	YouTube		Shift + Yellow / YouTube / Repeat

Original	Sustituto
	Shift + Green / APP /

