

 








 
 










| Original | Sustituto |
|--|---|
|  Sleep |  Sleep / Timer |
|  Clock |  Shift + Sleep / Timer |
|  Dimmer |  Shift + Mute / Dimmer |
|  Power |  Power |
|  Internet Radio |  TV/Radio / |
|  AUX |  Shift + 7 |
|  Music Server |  Sound / Title |
|  Bluetooth |  Shift + 9 |
|  iPod/USB |  Shift + 8 |
|  I<</CH- |  I<< / Preset- |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  >>I/CH+ |  >>I / Preset+ |
|  ADD Favorites |  CH+ / Page+ |
|  SDB Tone |  Audio / Lang I/II |
|  Volume+ |  Vol+ |
|  Call Favorites |  CH- / Page- |

| Original | Sustituto |
|--|--|
|  Mute |  Mute / Dimmer |
|  Volume- |  Vol- |
|  Top Menu |  D.Menu / Top |
|  Info |  Info / Angle |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Search |  Red / Netflix / Search |
|  Down |  Down |
|  Setup |  Setup / OPT / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |





| Original | Sustituto | Original | Sustituto |
|----------|-----------|----------|-----------------------------|
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | +10 | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | Clear | | Exit / Cancel / Clear |
| | Random | | Blue / Prime Video / Random |
| | Repeat | | Green / APP / Repeat |
| | Mode | | Picture / Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

