
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 EPG	 Guide / EPG / -/--
 7	 7	 TV	 Display / Media
 8	 8	 TV	 AV / Input / RDS
 9	 9	 Radio	 TV/Radio /
 < Prev	 I<< / Preset-	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat
 Next>	 >>I / Preset+	 Yellow	 Yellow / YouTube / Repeat
 Help	 D.Menu / Top	 Blue	 Blue / Prime Video / Random
 Timer	 Sleep / Timer	 Vol+	 Vol+
 Menu	 Menu / Home	 Mute	 Mute / Dimmer
 Info	 Info / Angle	 CH+	 CH+ / Page+

Original	Sustituto	Original	Sustituto
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Down	 Down	 Exit	 Exit / Cancel / Clear
 Exit	 Exit / Cancel / Clear	 EPG	 Guide / EPG / -/--
 EPG	 Guide / EPG / -/--	 TV	 Display / Media
 TV	 AV / Input / RDS	 Radio	 TV/Radio /
 Radio	 TV/Radio /	 Red	 Red / Netflix / Search
 Red	 Red / Netflix / Search	 Green	 Green / APP / Repeat
 Green	 Green / APP / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Yellow	 Yellow / YouTube / Repeat	 Blue	 Blue / Prime Video / Random
 Blue	 Blue / Prime Video / Random	 Vol+	 Vol+
 Vol+	 Vol+	 Mute	 Mute / Dimmer
 Mute	 Mute / Dimmer	 CH+	 CH+ / Page+
 CH+	 CH+ / Page+		





Original	Sustituto	Original	Sustituto
 Vol-	 Vol-		
 PVR	 Smart / List		
 CH-	 CH- / Page-		
 Audio	 Audio / Lang I/II		
 Text	 Text / Goto		
 Subtitle	 Subtitle / EQ		
 <<<	 <<< / Tune-		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

Original	Sustituto

