 
 

 
 
 

 




 
 









Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio
	0
	EPG
	Fav
	Menu
	Info

Original	Sustituto
	Pause / Step / Freeze
	Exit / Cancel / Clear
	SAT
	V-Mode
	TV/AV
	Sleep
	Up / PR+
	Up / PR+
	Left / Vol-
	Left / Vol-
	OK / List
	OK / List
	Right / Vol+
	Right / Vol+
	Page-
	Down / PR-
	Down / PR-





Original	Sustituto
Page+	Shift + CH+ /
Red / Find	Red / Netflix / Search
Green / V-Format	Picture / Format
Green / V-Format	Green / APP / Repeat
Yellow / TXT	Text / Goto
Yellow / TXT	Yellow / YouTube / Repeat
Blue / Audio L/R	Audio / Lang I/II
Blue / Audio L/R	Blue / Prime Video / Random
Record	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold
Shift	Eject / Surround
<< Fast	<< / Tune-
Fast >>	>> / Tune+
< Slow	I<< / Preset-
Slow >	>>I / Preset+

Original	Sustituto

