




 
 






















Original	Sustituto
 Power	 Power
 TV/VCR	 TV/Radio /
 DVD	 Shift + 2
 CH/Page+	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 CH/Page-	 CH- / Page-
 4	 4
 5	 5
 6	 6
 Vol+	 Vol+
 7	 7
 8	 8
 9	 9
 Vol-	 Vol-
 0/AV	 0

Original	Sustituto
 0/AV	 AV / Input / RDS
 Display	 Info / Angle
 Setup / Menu	 Setup / OPT /
 Setup / Menu	 Menu / Home
 Up / Green	 Up
 Up / Green	 Green / APP / Repeat
 Mute	 Mute / Dimmer
 Left / Red	 Left
 Left / Red	 Red / Netflix / Search
 Enter/Text/Mix/TV	 OK
 Enter/Text/Mix/TV	 Text / Goto
 Right / Blue	 Right
 Right / Blue	 Blue / Prime Video / Random
 DVD Menu	 D.Menu / Top
 Down / Yellow	 Down
 Down / Yellow	 Yellow / YouTube / Repeat
 Cancel / F/T/B	 Exit / Cancel / Clear



