


















 










Original	Sustituto
 Power	 Power
 Open/Close	 Eject / Surround
 Dimmer	 Shift + Mute / Dimmer
 Display	 Display / Media
 Sleep	 Sleep / Timer
 CD	 Shift + 3
 Tuner	 Shift + 6
 Line	 Subtitle / EQ
 Digital	 D.Menu / Top
 USB	 Shift + 8
 Pause	 Pause / Step / Freeze
 I<<< / Preset	 I<< / Preset-
 Play	 Play / Slow
 Preset >/>>I	 >>I / Preset+
 <<< / Tun	 << / Tune-
 Stop	 Stop / Hold
 Tun >/>>	 >> / Tune+

Original	Sustituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Tone Ball	 Smart / List
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 Memory	 TV/Radio /
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3





Original	Sustituto	Original	Sustituto
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
>10	>10	GUIDE EPG	Guide / EPG / -/--
10/ 0	0/10	HDMI - BAT	0
D.TUN/CLEAR	D.Tun/Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear

Original	Sustituto

