
 

 



 


 

 




 

 




 

 








 
 





 

 



 

 

 

 
 

 

 





Original	Sustituto
 Power	 Power
 Continued	 Smart / List
 Open / Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 FL Dimmer	 Mute / Dimmer
 CD / SACD	 AV / Input / RDS
 HDMI	 Shift + 0
 Top Menu	 D.Menu / Top
 Function	 Shift + Setup / OPT / Tools
 Exit	 Exit / Cancel / Clear
 Home Media	 Shift + Display / Media
 Menu / Popup	 Setup / OPT /
 Up	 Up
 Down	 Down
Left	Left

Original	Sustituto
 Right	 Right
 Enter	 OK
 Home Menu	 Menu / Home
 Return	 Back / Return
 Red / Program	 Red / Netflix / Search
 Green / Bookmark	 Green / APP / Repeat
 Yellow / Zoom	 Yellow / YouTube / Repeat
 Blue / Index	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 1	 1
2	2





	Original	Sustituto	
	3	 3	
	2nd Video	 +  Shift + 1	
	4	 4	
	5	 5	
	6	 6	
	2nd Audio	 +  Shift + 2	
	7	 7	
	8	 8	
	9	 9	
	A-B	 +  Shift + Yellow / YouTube /	
	Clear	 +  Shift + Exit / Cancel / Clear	
	0	 0	
	Repeat	 +  Shift + Green / APP /	
	Display	 Display / Media	
	Keylock	 Text / Goto	
	Replay	 Vol+	
	Skip Search	 Vol-	

Original	Sustituto

