 







 
































 










Original	Sustituto
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 Input	 AV / Input / RDS
 1/Tracking-	 1
 2	 2
 3/Tracking+	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 System	 Smart / List
 Clear	 Exit / Cancel / Clear

Original	Sustituto
 Setup	 Setup / OPT /
 Display	 Display / Media
 Title/PBC	 Sound / Title
 Menu	 Menu / Home
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 OK/Enter	 OK
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Search	 Red / Netflix / Search
 Zoom	 Zoom / Size
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze





Original	Sustituto
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Speed	 Picture / Format
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Tv/VCR	 TV/Radio /
 3D	 Shift + 3
 Mark	 Fav / Marker / PC
 Angle	 Info / Angle
 CM-Skip	 Guide / EPG / -/-
 Replay	 Text / Goto
 Last CH	 Back / Return
 Program	 Shift + TV/Radio / Program

Original	Sustituto

