
























































Original	Sustituto
 Power	 Power
 -/-- TV	 Guide / EPG / -/--
 TV	 TV/Radio /
 DVD	 Smart / List
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 Display	 Display / Media
 PP	 Back / Return
 TV/AV	 AV / Input / RDS
 1	 1
 1 TV	 Shift + 1
 2	 2
 2 TV	 Shift + 2
 3	 3
 3 TV	 Shift + 3
 4	 4
 4 TV	 Shift + 4

Original	Sustituto
 5	 5
 5 TV	 Shift + 5
 6	 6
 6 TV	 Shift + 6
 7	 7
 7 TV	 Shift + 7
 8	 8
 8 TV	 Shift + 8
 9 TV	 Shift + 9
 9	 9
 0 TV	 Shift + 0
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 +10	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Setup	 Setup / OPT /
 Menu DVD	 Menu / Home





Original	Sustituto
Menu Tv	D.Menu / Top
CH+	CH+ / Page+
CH-	CH- / Page-
Vol+	Vol+
Vol-	Vol-
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Stop	Stop / Hold

Original	Sustituto
Repeat A-B	Yellow / YouTube / Repeat
Program	Shift + TV/Radio / Program
Slow	Shift + Play /
Search	Red / Netflix / Search
Zoom	Zoom / Size
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Angle	Info / Angle
Subtitle	Subtitle / EQ
PAL/NTSC	Picture / Format
?	Shift + Info / Angle
◆	Shift + Setup / OPT / Tools
+	Shift + Zoom /
[><]	Shift + Subtitle / EQ
Timer	Sleep / Timer
X	Shift + Exit / Cancel / Clear
[/ =]	Shift + Text / Goto

Goto





Original	Sustituto	Original	Sustituto
	Text / Goto		

