



Original	Sustituto
Power	Power
-/-- TV	Guide / EPG / -/--
TV	TV/Radio /
DVD	Smart / List
Open/Close	Eject / Surround
Mute	Mute / Dimmer
Display	Display / Media
PP	Back / Return
TV/AV	AV / Input / RDS
1	1
1 TV	Shift + 1
2	2
2 TV	Shift + 2
3	3
3 TV	Shift + 3
4	4
4 TV	Shift + 4

Original	Sustituto
5	5
5 TV	Shift + 5
6	6
6 TV	Shift + 6
7	7
7 TV	Shift + 7
8	8
8 TV	Shift + 8
9 TV	Shift + 9
9	9
0 TV	Shift + 0
0	0
-/--	Shift + Guide / EPG / -/--
+10	Fav / Marker / PC
Audio	Audio / Lang I/II
Setup	Setup / OPT /
Menu DVD	Menu / Home







Original	Sustituto
Menu Tv	D.Menu / Top
CH+	CH+ / Page+
CH-	CH- / Page-
Vol+	Vol+
Vol-	Vol-
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Stop	Stop / Hold

Original	Sustituto
Repeat A-B	Yellow / YouTube / Repeat
Program	Shift + TV/Radio / Program
Slow	Shift + Play /
Search	Red / Netflix / Search
Zoom	Zoom / Size
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Angle	Info / Angle
Subtitle	Subtitle / EQ
PAL/NTSC	Picture / Format
?	Shift + Info / Angle
◆	Shift + Setup / OPT / Tools
+	Shift + Zoom /
[><]	Shift + Subtitle / EQ
Timer	Sleep / Timer
X	Shift + Exit / Cancel / Clear
[/ =]	Shift + Text / Goto

Goto





Original	Sustituto	Original	Sustituto
	[≡]		Text / Goto

