
























 



 





















 







| Original | Sustituto | Original | Sustituto |
|--|------------|--|-----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Shuffle |  | Blue / Prime Video / Random |
|  | [/] |  | >> / Preset+ |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Right |  | Right |
|  | OK |  | OK |
|  | Esc |  | Exit / Cancel / Clear |
|  | Snap Shot |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Pause/Step |  | Pause / Step / Freeze |
|  | Record |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |

