



Original	Sustituto
	Power
	+ Shift + Power
	Sleep / Timer
	+ Shift + 3
	+ Shift + 5
	+ Shift + 2
	+ Shift + 1
	+ Shift + 6
	+ Shift + 0
	+ Shift + 7
	+ Shift + 4
	+ Shift + 9
	+ Shift + 8
	Vol+
	Vol-
	Mute / Dimmer
	1

Original	Sustituto
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/-
	0
	Fav / Marker / PC
	Sound / Title
	Up
	Menu / Home
	Left
	OK
	Right





Original	Sustituto	Original	Sustituto
	Return		Back / Return
	Down / Preset/CH		Down
	Display / On		Display / Media





Original	Sustituto
Power	Power
Standby	+ Shift + Power
Sleep	Sleep / Timer
CD	+ Shift + 3
MD/CD-R	+ Shift + 5
DVD	+ Shift + 2
DTV/CBL	+ Shift + 1
Tuner	+ Shift + 6
Multi CH In	+ Shift + 0
V-AUX / Dock	+ Shift + 7
DVR	+ Shift + 4
USB	+ Shift + 8
NET	+ Shift + 9
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1

Original	Sustituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Band	Sound / Title
Up / Preset+	Up
Up / Preset+	>> / Preset+
Srch Mode	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right



A/B/C/D/E+

