



























 
 


Original	Sustituto
 Power Net	 Shift + Power
 AMP Power	 Power
 CD	 Shift + 3
 Recorder	 Shift + 2
 Network	 Shift + 1
 Optical 1	 Shift + 4
 Optical 2	 Shift + 5
 Coaxial	 Shift + 6
 Phono	 Shift + 7
 USB-DAC	 Shift + 9
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+

Original	Sustituto
 Info	 Info / Angle
 Analog Mode	 Smart / List
 Volume+	 Vol+
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Call Net Favorites	 Display / Media
 Add Net Favorites	 Fav / Marker / PC
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Net SRCH/CD	 TV/Radio /
 Down	 Down
 Net Setup/CD Pure Direct	 Setup / OPT /
 1	 1
 2	 2





	Original	Sustituto		Sustituto
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	+10		Guide / EPG / -/--	
	0		0	
	Clear		Exit / Cancel / Clear	
	Random		Blue / Prime Video / Random	
	Repeat		Green / APP / Repeat	
	Mode		Picture / Format	
	Dimmer		Shift + Mute / Dimmer	

	Original	Sustituto





Original	Sustituto
 Power CD	 +  Shift + Power
 AMP Power	 Power
 CD	 +  Shift + 3
 Recorder	 +  Shift + 2
 Network	 +  Shift + 1
 Optical 1	 +  Shift + 4
 Optical 2	 +  Shift + 5
 Coaxial	 +  Shift + 6
 Phono	 +  Shift + 7
 USB-DAC	 +  Shift + 9
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+

Original	Sustituto
 Info	 Info / Angle
 Analog Mode	 Smart / List
 Volume+	 Vol+
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Net SRCH/CD	 TV/Radio /
 Net Setup/CD Pure Direct	 Setup / OPT /
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4





Original		Sustituto		Original		Sustituto	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	+10		Guide / EPG / -/--				
	0		0				
	Clear		Exit / Cancel / Clear				
	Random		Blue / Prime Video / Random				
	Repeat		Green / APP / Repeat				
	Mode		Picture / Format				
	Dimmer		Yellow / YouTube / Repeat				

