






Original	Sustituto	Original	Sustituto
 Power	 Power	 <	 I<< / Preset-
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 >	 >>I / Preset+
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Vol+	 Vol+
 9	 9	 Back	 Back / Return
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Info	 Info / Angle	 TV	 AV / Input / RDS
 PLUGIH	 Setup / OPT /	 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--	 Radio	 TV/Radio /
 Fav	 Fav / Marker / PC	 Radio	 Shift + 6

Original	Sustituto	Original	Sustituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			



