














































 



 
 

 













 



 







Original	Sustituto	Original	Sustituto
Power		Power	
Sleep		Sleep / Timer	
Mute		Mute / Dimmer	
Mode		AV / Input / RDS	
1		1	
2		2	
3		3	
Eject/Nicam2		Eject / Surround	
Eject/Nicam2		Sound / Title	
4		4	
5		5	
6		6	
TXT/MIX		Text / Goto	
Play/Pause		Play / Slow	
Play/Pause		Pause / Step / Freeze	
7		7	
8		8	
9		9	
Stop/Exit/Cancel		Exit / Cancel / Clear	
Stop/Exit/Cancel		Stop / Hold	
-/--		Guide / EPG / -/--	
0		0	
Back		Back / Return	
SYS Menu		Menu / Home	
Rec		Rec / Rec Mode	
Up		Up	
CH+		CH+ / Page+	
DTV/Radio		TV/Radio /	
Left		Left	
Enter		OK	
Right		Right	
Vol-		Vol-	
Down		Down	
CH-		CH- / Page-	


















 


Original	Sustituto
Vol+	 Vol+
Return	 +  Shift + Back / Return
Menu DVD	 D.Menu / Top
Setup	 Setup / OPT /
Display	 Display / Media
Search/FAV	 +  Shift + Red / Netflix /
Search/FAV	 Fav / Marker / PC
Slow/EPG	 +  Shift + Play /
Slow/EPG	 +  Shift + Guide / EPG / --
Language/Info	 Audio / Lang I/II
Language/Info	 Info / Angle
Zoom/List	 Zoom / Size
Zoom/List	 Smart / List
Red/Angle	 Red / Netflix / Search
Red/Angle	 +  Shift + Info / Angle
Green/Program	 Green / APP / Repeat
Green/Program	 +  Shift + TV/Radio / Program

Original	Sustituto
Yellow/Repeat	 +  Shift + Green / APP / Repeat
Yellow/Repeat	 Yellow / YouTube / Repeat
Blue/A-B	 Blue / Prime Video / Random
Blue/A-B	 +  Shift + Yellow / YouTube /
<</Hold	 +  Shift + Stop /
<</Hold	 << / Tune-
>>/Index	 >> / Tune+
l<</Size	 l<< / Preset-
l<</Size	 +  Shift + Zoom /
>>/Reveal	 >> / Preset+
Subtitle	 Subtitle / EQ
Title/Subpage	 +  Shift + Sound / Title
FAV-	 +  Shift + Down
FAV+	 +  Shift + Up



Original	Sustituto	Original	Sustituto
Standby	 Power	8	 8
Auto / Eject	 Eject / Surround	9	 9
Mute	 Mute / Dimmer	Input	 AV / Input / RDS
P.Mode	 Picture / Format	0	 0
S.Mode	 Sound / Title	Recall	 Back / Return
Info	 Info / Angle	Sleep	 Sleep / Timer
Nicam	 Audio / Lang I/II	Up	 Up
1	 1	Left	 Left
2	 2	Enter	 OK
3	 3	Right	 Right
Menu	 Menu / Home	Down	 Down
4	 4	CH-	 CH- / Page-
5	 5	CH+	 CH+ / Page+
6	 6	Vol-	 Vol-
Exit / D.Setup	 Setup / OPT /	Vol+	 Vol+
Exit / D.Setup	 Exit / Cancel / Clear	Text / Slow	 Text / Goto
7	 7	Text / Slow	 +  Shift + Play / Slow























 

 
 










Original	Sustituto	Original	Sustituto
8	 8	8	8
9	 9	9	9
Input	 AV / Input / RDS	Input	AV / Input / RDS
0	 0	0	0
Recall	 Back / Return	Recall	Back / Return
Sleep	 Sleep / Timer	Sleep	Sleep / Timer
Up	 Up	Up	Up
Left	 Left	Left	Left
Enter	 OK	Enter	OK
Right	 Right	Right	Right
Down	 Down	Down	Down
CH-	 CH- / Page-	CH-	CH- / Page-
CH+	 CH+ / Page+	CH+	CH+ / Page+
Vol-	 Vol-	Vol-	Vol-
Vol+	 Vol+	Vol+	Vol+
Text / Slow	 Text / Goto	Text / Slow	Text / Goto
Text / Slow	 +  Shift + Play / Slow	Text / Slow	Shift + Play / Slow



Original	Sustituto
Hold / Play/Pause	 Play / Slow
Hold / Play/Pause	 +  Shift + Stop /
Hold / Play/Pause	 Pause / Step / Freeze
Page+ / Stop	 Stop / Hold
Page+ / Stop	 +  Shift + CH+ /
Page- / Zoom	 Zoom / Size
Page- / Zoom	 +  Shift + CH- /
[≡i] / I<<	 I<< / Preset-
[≡□] / >>I	 >>I / Preset+
[≡?] / <<<	 <<< / Tune-
[≡●] / >>>	 >>> / Tune+
EPG / D.Menu	 D.Menu / Top
EPG / D.Menu	 Guide / EPG / -/--
FAV / D.Title	 +  Shift + Sound / Title
FAV / D.Title	 Fav / Marker / PC
FAV- / D.Disp	 Display / Media
FAV- / D.Disp	 +  Shift + Down

Original	Sustituto
FAV+ / Goto	 +  Shift + Up
FAV+ / Goto	 +  Shift + Text /
Red / D.Prog	 TV/Radio /
Red / D.Prog	 Red / Netflix / Search
Green / Step	 +  Shift + Pause / Step /
Green / Step	 Green / APP / Repeat
Yellow / RPT	 +  Shift + Green / APP /
Yellow / RPT	 Yellow / YouTube / Repeat
Blue / A-B	 +  Shift + Yellow / YouTube /
Blue / A-B	 Blue / Prime Video / Random
List / Angle	 +  Shift + Info / Angle
List / Angle	 Smart / List
SUB-T	 Subtitle / EQ
Aspect	 +  Shift + Picture / Format
Rec	 Rec / Rec Mode









 



Original	Sustituto	Original	Sustituto
Standby	 Power	Audio	 Audio / Lang I/II
Auto	 Smart / List	CH+	 CH+ / Page+
Mute	 Mute / Dimmer	Vol-	 Vol-
1	 1	Display	 Display / Media
2	 2	CH-	 CH- / Page-
3	 3	Up	 Up
4	 4	Left	 Left
5	 5	OK	 OK
6	 6	Right	 Right
7	 7	Menu	 Menu / Home
8	 8	Down	 Down
9	 9	Exit	 Exit / Cancel / Clear
-/--	 +  Shift + Guide / EPG / -/--	Input	 AV / Input / RDS
0	 0	P.Mode	 Picture / Format
Recall	 Back / Return	S.Mode	 Sound / Title
Vol+	 Vol+	Sleep	 Sleep / Timer
Aspect	 +  Shift + Picture / Format	FAV	 Fav / Marker / PC



Original	Sustituto	Original	Sustituto
FAV-	 +  Shift + CH- /	Stop	 Stop / Hold
FAV+	 +  Shift + CH+ /	I<<	 I<< / Preset-
EPG	 Guide / EPG / -/--	>>I	 >>I / Preset+
Text	 Text / Goto	Red	 Red / Netflix / Search
Hold	 +  Shift + Stop /	Green	 Green / APP / Repeat
Tv/Radio	 TV/Radio /	Yellow	 Yellow / YouTube / Repeat
Subtitle	 Subtitle / EQ	Blue	 Blue / Prime Video / Random
Index	 Info / Angle		
Size	 Zoom / Size		
Reveal	 Setup / OPT /		
Subpage	 Eject / Surround		
Media	 +  Shift + Display / Media		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
<<	 << / Tune-		
>>	 >> / Tune+		
Rec	 Rec / Rec Mode		



Original	Sustituto	Original	Sustituto
On/Off	 Power	Chan.Down	 CH- / Page-
Mute	 Mute / Dimmer	1	 1
Txt Stop	 Stop / Hold	2	 2
Info	 Rec / Rec Mode	3	 3
Sleep Timer	 Picture / Format	4	 4
Text	 Setup / OPT /	5	 5
TV/AV	 AV / Input / RDS	6	 6
Menu	 Menu / Home	7	 7
Menu Up	 Up	8	 8
Menu Left	 Left	9	 9
OK Enter	 OK	Guide -/-- 1.	 Guide / EPG / -/--
Menu Right	 Right	0/10	 0
Menu Off	 Exit / Cancel / Clear	2.Fav P/C 2.	 Fav / Marker / PC
Menu Down	 Down		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		

