 

 
 

 

 

 





 


 



 

 

 

 







Original	Sustituto
 OP/CL	 Eject / Surround
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide / EPG / /--
 Auto Scan	 Sleep / Timer
 Title / Text	 Sound / Title
 Subtitle	 Subtitle / EQ

Original	Sustituto
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Rev	 << / Tune-
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Next	 >>I / Preset+
 Fwd	 >> / Tune+
 Prev	 I<< / Preset-
 Vol-	 Vol-
 Play/Pause	 Play / Slow





Original	Sustituto
Play/Pause	Pause / Step / Freeze
Vol+	Vol+
Stop	Stop / Hold
Resume	Rec / Rec Mode
Zoom	Zoom / Size
Mute	Mute / Dimmer
Red / Clear	Exit / Cancel / Clear
Red / Clear	Red / Netflix / Search
Green / Ran	Green / APP / Repeat
Yellow / PBC	Yellow / YouTube / Repeat
Blue / Repeat	Shift + Green / APP / Repeat
Blue / Repeat	Blue / Prime Video / Random
OSD	Display / Media
N/P	Text / Goto
Slow	Shift + Play /
Return	Back / Return
Prog / EPG	TV/Radio /

Original	Sustituto
Prog / EPG	Shift + Guide / EPG / -/-
V.Mode	Shift + 4
V.Mode	Picture / Format
Step	Shift + Pause / Step /
A-B	Shift + Yellow / YouTube /

