



Original	Sustituto
	D.Menu / Top
	Menu / Home
	Smart / List
	Power
	Display / Media
	Info / Angle
	Sleep / Timer
	TV/Radio /
	Up
	Left
	OK
	Right
	Down
	Mute / Dimmer
	Audio / Lang I/II
	Back / Return
	1

Original	Sustituto
	2
	3
	4
	5
	6
	7
	8
	9
	0

