







 

 

Original	Sustituto
 Power	 Power
 TV Power	 Shift + Power
 TV Vol+	 Shift + Vol+
 TV Vol+	 Vol+
 TV CH+	 Shift + CH+ /
 Drive Select	 Text / Goto
 TV AV	 Shift + AV / Input / RDS
 TV Vol-	 Shift + Vol-
 TV Vol-	 Vol-
 TV CH-	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6

Original	Sustituto
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 ShowView	 Picture / Format
 */Delete	 Shift + Exit / Cancel / Clear
 0	 0
 Input Select	 AV / Input / RDS
 Status	 Info / Angle
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play / 1.3	 Play / Slow
 Time Slip	 Sleep / Timer





Original	Sustituto
 Prog / Check	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Direct Navigator	 Smart / List
 Left / < l	 Left
 Up	 Up
 Right / >	 Right
 Function Menu	 Menu / Home
 OK	 OK
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red / Audio	 Audio / Lang I/II
 Red / Audio	 Red / Netflix / Search
 Green / Display	 Display / Media
 Green / Display	 Green / APP / Repeat
 Yellow / Create Chapter	 Yellow / YouTube / Repeat
 Blue / Manual Skip	 Blue / Prime Video / Random

Original	Sustituto
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Ext Link	 D.Menu / Top
 Direct Tv Rec	 Eject / Surround

