
































 




 








| Original | Sustituto |
|---|--|
|  Power |  Power |
|  Auto Off |  Shift + Power |
|  Sleep |  Sleep / Timer |
|  Muting |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Disc |  Display / Media |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  +10 |  Guide / EPG / -/-- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Program |  TV/Radio / |

| Original | Sustituto |
|--|---|
|  Cancel |  Exit / Cancel / Clear |
|  Repeat |  Green / APP / Repeat |
|  Random |  Blue / Prime Video / Random |
|  Tape |  Shift + 5 |
|  CD |  Shift + 3 |
|  Tuner |  Shift + 6 |
|  AUX |  Shift + 7 |
|  EQ |  Subtitle / EQ |
|  3D AI |  Smart / List |
|  << |  << / Tune- |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  >> |  >> / Tune+ |
|  V.Bass |  Sound / Title |
|  </▼ |  Left |
|  </▼ |  Down |
|  </▼ |  CH- / Page- |



Program

