


 








 




Original	Sustituto
	Mute / Dimmer
	TV / Input / RDS
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0
	TV/Radio /
	CH+ / Page+
	Guide / EPG / -/-

Original	Sustituto
	Vol+
	CH- / Page-
	Fav / Marker / PC
	Vol-
	Info / Angle
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Red / Audio
	Green / APP / Repeat
	Green / Subt





Original	Sustituto
Yellow / Text	Text / Goto
Yellow / Text	Yellow / YouTube / Repeat
Blue / Sleep	Blue / Prime Video / Random
Blue / Sleep	Sleep / Timer
Option 1	D.Menu / Top
Option 2	Setup / OPT /
Pal / NTSC	Picture / Format
Pause	Stop / Hold
Freeze	Pause / Step / Freeze
Zoom	Zoom / Size

Original	Sustituto

