 





 
 
 

 







 

 

 

 

 
 
 
 








 


 





 
 

 

 


 
 



 

 

 












Original	Sustituto
 Power	 Power
 Power Tv	 Shift + Power
 Tv/AV Tv	 Shift + AV / Input / RDS
 Vol+ Tv	 Shift + Vol+
 DVD	 Shift + 2
 FM	 TV/Radio /
 EXT-IN	 AV / Input / RDS
 Vol- Tv	 Shift + Vol-
 1	 1
 2	 2
 3	 3
 Select >	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 < Select	 CH- / Page-
 7	 7

Original	Sustituto
 8	 8
 9	 9
 Vol+	 Vol+
 Cancel	 Exit / Cancel / Clear
 0	 0
 +10	 Guide / EPG / -/-
 Vol-	 Vol-
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Quick OSD	 Red / Netflix / Search
 [] VS	 Green / APP / Repeat
 One Touch Play	 Fav / Marker / PC





Original	Sustituto
 Top Menu/Direct Navigator	 D.Menu / Top
 Up	 Up
 Functions	 Smart / List
 <II/Left	 Left
 Enter	 OK
 Right/II>	 Right
 Menu/Play List	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Level/Subwoofe	 Sound / Title
 EQ	 Shift + Subtitle / EQ
 H.Bass	 Info / Angle
 Group	 Picture / Format
 Audio	 Audio / Lang I/II
 Repeat	 Shift + Green / APP /
 Play Mode	 Text / Goto
 Quick Replay	 Blue / Prime Video / Random

Original	Sustituto
 Zoom	 Zoom / Size
 Manual Skip	 Yellow / YouTube / Repeat
 Page/Angle	 Shift + Setup / OPT / Tools
 Subtitle	 Subtitle / EQ
 Setup	 Setup / OPT /
 Sleep	 Sleep / Timer
 FL.Display	 Display / Media
 Muting	 Mute / Dimmer

