
 










 











 







 







Original	Sustituto
 On/Standby	 Power
 Open/Close	 Eject / Surround
 Tuner(Band)	 Shift + 6
 ASPM	 Sound / Title
 RDS-PTY	 Subtitle / EQ
 Display	 Display / Media
 Mute	 Mute / Dimmer
 X-Bass	 Audio / Lang I/II
 Bass/Treble	 Picture / Format
 1	 1
 2	 2
 3	 3
 Memory	 D.Menu / Top
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear

Original	Sustituto
 7	 7
 8	 8
 9	 9
 Clock/Timer	 Shift + Sleep / Timer
 0	 0
 10+	 Guide / EPG / -/-
 Sleep	 Sleep / Timer
 Play Mode	 Red / Netflix / Search
 Folder	 Back / Return
 (Tv Out)/Display iPod/iPhone	 TV/Radio /
 Menu iPod/iPhone	 Menu / Home
 Play/Pause iPod/iPhone	 Shift + Play /
 Display CD/USB	 Smart / List
 Stop CD/USB	 Stop / Hold
 Play/Pause	 Play / Slow
 << Tuning	 << / Tune-
 I<<	 I<< / Preset-





Original	Sustituto
Preset Up	Shift + >>I / Preset+
>>I	>>I / Preset+
Tuning >>	>> / Tune+
Vol-	Vol-
Enter	OK
Vol+	Vol+
Equalizer Mode	Setup / OPT /
Preset Down	Shift + I<< / Preset-
Demo/Dimmer	Shift + Mute / Dimmer
iPod/iPhone	Shift + 1
CD	Shift + 3
USB	Shift + 8
Input/Audio In	AV / Input / RDS

Original	Sustituto

