














































 

 











 




| Original | Sustituto | Original | Sustituto |
|--------------|---|------------|---|
| On/Off |  Power | Menu video |  D.Menu / Top |
| Mute |  Mute / Dimmer | Store |  Setup / OPT / |
| Reveal |  Play / Slow | Text |  Text / Goto |
| Update |  Pause / Step / Freeze | Input |  AV / Input / RDS |
| Txt Stop |  Stop / Hold | Menu |  Menu / Home |
| Tone- |  << / Tune- | Menu Up |  Up |
| Tone+ |  >> / Tune+ | Info |  Info / Angle |
| Contrast- |  << / Preset- | Menu Left |  Left |
| Contrast+ |  >> / Preset+ | OK Enter |  OK |
| Color- S.Std |  Sound / Title | Menu Right |  Right |
| Menu audio |  Audio / Lang I/II | Menu Off |  Exit / Cancel / Clear |
| Subt.List |  Subtitle / EQ | Menu Down |  Down |
| Surround |  Eject / Surround | Swap |  Back / Return |
| Color+ P.Std |  Picture / Format | Volume+ |  Vol+ |
| Txt Expand |  Zoom / Size | Output |  Smart / List |
| Sleep Timer |  Sleep / Timer | Chan.Up |  CH+ / Page+ |
| Return TV |  TV/Radio / | Volume- |  Vol- |



| Original | Sustituto | Original | Sustituto |
|---------------|---|----------------|---|
| Disp |  Display / Media | Blue |  Blue / Prime Video / Random |
| Chan.Down |  CH- / Page- | Tune- |  Shift + << / |
| 1 |  1 | Tune+ |  Shift + >> / |
| 2 |  2 | Bright- Sys |  Shift + I<< / Preset- |
| 3 |  3 | Bright+ Mode |  Shift + >>I / Preset+ |
| 4 |  4 | Nicam/Mono |  Shift + Audio / Lang I/II |
| 5 |  5 | Mix Scan |  Shift + Text / |
| 6 |  6 | TV/AV |  Shift + AV / Input / RDS |
| 7 |  7 | Level L |  Shift + Left |
| 8 |  8 | Aft/Caf |  Shift + OK |
| 9 |  9 | Level R/Woofer |  Shift + Right |
| Guide -/-- 1. |  Guide / EPG / -/-- | Back |  Shift + Back / Return |
| 0/10 |  0 | Audio+ |  Shift + Vol+ |
| 2.Fav P/C 2. |  Fav / Marker / PC | Audio- |  Shift + Vol- |
| Red |  Red / Netflix / Search | Display |  Shift + Display / Media |
| Green |  Green / APP / Repeat | Search |  Shift + Red / Netflix / |
| Yellow |  Yellow / YouTube / Repeat | | |

