



Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + CH- /
	I<< / Preset-
	Shift + Sleep / Timer
	0
	Shift + CH+ /
	>>I / Preset+

Original	Sustituto
	Info / Angle
	Subtitle / EQ
	Audio / Lang I/II
	Smart / List
	Vol+
	Setup / OPT /
	CH+ / Page+
	Vol-
	TV/Radio /
	CH- / Page-
	Text / Goto
	Fav / Marker / PC
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Up
	Left
	OK





Original	Sustituto	Original	Sustituto
	Right		Right
	Menu		Menu / Home
	Down		Down
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	>		Shift + Pause / Step /
	Film		Display / Media
	Zoom		Zoom / Size
	Timer		Sleep / Timer
	USB		Shift + 8
	USB		AV / Input / RDS

