


















 
 
 





 












 



 







 

 

 

 

 







 







| Original | Sustituto |
|---|---|
|  |  Power |
|  |  Picture / Format |
|  |  TV/Radio / |
|  |  AV / Input / RDS |
|  |  Shift + Red / Netflix / |
|  |  D.Menu / Top |
|  |  Shift + Blue / Prime |
|  |  Shift + Yellow / YouTube / |
|  |  Shift + Green / APP / |
|  |  Sleep / Timer |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Menu / Home |
|  |  Shift + Menu / |
|  |  Guide / EPG / -/- |

| Original | Sustituto |
|---|---|
|  |  Info / Angle |
|  |  Exit / Cancel / Clear |
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Setup / OPT / |
|  |  Down |
|  |  Back / Return |
|  |  Smart / List |
|  |  Display / Media |
|  |  Zoom / Size |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  >> / Tune+ |
|  |  Stop / Hold |
|  |  Pause / Step / Freeze |





| Original | Sustituto | Original | Sustituto |
|---|-----------|---|-------------------|
|  | REC |  | Rec / Rec Mode |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Text |  | Text / Goto |
|  | CH- |  | CH- / Page- |
|  | STTL |  | Subtitle / EQ |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | ?/eHELP |  | Eject / Surround |
|  | 0 |  | 0 |
|  | Last View |  | Fav / Marker / PC |

