



Original	Sustituto
 Power	 Power
 TC Reset	 Exit / Cancel / Clear
 Display	 Display / Media
 Data Code	 Shift + Display / Media
 Search Select	 AV / Input / RDS
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Menu	 Menu / Home
 ↑	 Up
 Set	 Setup / OPT /
 ↓	 Down
 <<	 CH- / Page-
 >>	 CH+ / Page+
 x1/10	 Red / Netflix / Search
 x1/3	 Green / APP / Repeat
 x1	 Yellow / YouTube / Repeat
 x2	 Blue / Prime Video / Random

Original	Sustituto
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <</REW	 << / Tune-
 Play	 Play / Slow
 >>/FF	 >> / Tune+
 Stop	 Stop / Hold

