









 

 























 





 
 


 











 

 





 





Original	Sustituto	Original	Sustituto
 Power	 Power	 EPG	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 I<<	 I<< / Preset-
 1	 1	 >>I	 >>I / Preset+
 2	 2	 <<	 << / Tune-
 3	 3	 >>	 >> / Tune+
 TTX	 Text / Goto	 Audio	 Audio / Lang I/II
 4	 4	 CH+	 CH+ / Page+
 5	 5	 Up	 Up
 6	 6	 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ	 Left	 Left
 7	 7	 Enter	 OK
 8	 8	 Right	 Right
 9	 9	 Zoom	 Zoom / Size
 Info	 Info / Angle	 Down	 Down
 0/10	 0	 CH-	 CH- / Page-
 Goto	 Shift + Text /	 Tv/VCR	 AV / Input / RDS
 FAV	 Fav / Marker / PC	 Play	 Play / Slow





Original	Sustituto
	Pause / Step / Freeze
	Stop / Hold
	Menu / Home
	Rec / Rec Mode
	Smart / List
	Exit / Cancel / Clear
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol-
	Vol+

Original	Sustituto

