



Original	Sustituto	Original	Sustituto
Power	Power	Nicam	Audio / Lang I/II
Mute	Mute / Dimmer	Menu	Menu / Home
1	1	Up	Up
2	2	Source	AV / Input / RDS
3	3	Left	Left
4	4	OK	OK
5	5	Right	Right
6	6	Down	Down
7	7	Exit	Exit / Cancel / Clear
8	8	Display	Display / Media
9	9	Vol+	Vol+
0	0	CH+	CH+ / Page+
-/--	SHIFT +  GUIDE EPG	Vol-	Vol-
Recall	Back / Return	List	Smart / List
P.Mode	Picture / Format	FAV/List	Fav / Marker / PC
S.Mode	Sound / Title	CH-	CH- / Page-
Sleep	Sleep / Timer	Tv/Radio	TV/Radio /



Program



Original	Sustituto
EPG	Guide / EPG / -/--
Aspect	Shift + Picture / Format
Freeze	Pause / Step / Freeze
Index	Info / Angle
Cancel	Shift + Exit / Cancel / Clear
Subpage	Subtitle / EQ
Text	Text / Goto
Reveal	D.Menu / Top
Size	Zoom / Size
Hold	Stop / Hold
Mix	Setup / OPT /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random

Original	Sustituto

