

 



 
 

 



 




Original	Sustituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	+  Shift + Guide / EPG / -/--
Recall	Back / Return
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer

Original	Sustituto
Nicam	Audio / Lang I/II
Menu	Menu / Home
Up	Up
Source	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Display	Display / Media
Vol+	Vol+
CH+	CH+ / Page+
Vol-	Vol-
List	Smart / List
FAV/List	Fav / Marker / PC
CH-	CH- / Page-
Tv/Radio	TV/Radio /





Original	Sustituto
 EPG	 Guide / EPG / -/--
 Aspect	 Shift + Picture / Format
 Freeze	 Pause / Step / Freeze
 Index	 Info / Angle
 Cancel	 Shift + Exit / Cancel / Clear
 Subpage	 Subtitle / EQ
 Text	 Text / Goto
 Reveal	 D.Menu / Top
 Size	 Zoom / Size
 Hold	 Stop / Hold
 Mix	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

Original	Sustituto

