







Original	Sustituto	Original	Sustituto
 Guide	 Guide / EPG / -/--	 0	 0
 ↔/Interactive	 Menu / Home	 Radio	 TV/Radio /
 [: :]/Cinema	 Display / Media	 Back	 Back / Return
 Power	 Power	 Red	 Red / Netflix / Search
 1	 1	 Green	 Green / APP / Repeat
 2	 2	 Yellow	 Yellow / YouTube / Repeat
 3	 3	 Blue	 Blue / Prime Video / Random
 >>/Goto	 >> / Tune+	 Vol+	 Vol+
 4	 4	 Up	 Up
 5	 5	 CH+	 CH+ / Page+
 6	 6	 Left	 Left
 i/Details	 Info / Angle	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Vol-	 Vol-
 9	 9	 Down	 Down
 ?/Help	 Smart / List	 CH-	 CH- / Page-
 TV	 AV / Input / RDS	 Mute	 Mute / Dimmer

Original	Sustituto	Original	Sustituto
 0	 0	 TV	 DVD
 Radio	 TV/Radio /	 SLOW	 STEP - FREEZE
 Back	 Back / Return	 HOLD	 REC MODE
 Red	 Red / Netflix / Search	 PRESET-	 PRESET+
 Green	 Green / APP / Repeat	 TUNE-	 TUNE+
 Yellow	 Yellow / YouTube / Repeat	 TITLE	 LANG UII
 Blue	 Blue / Prime Video / Random	 EQ	 SURROUND
 Vol+	 Vol+	 SOUND	 AUDIO
 Up	 Up	 SUBTITLE	 TIMER
 CH+	 CH+ / Page+	 PICTURE	 ZOOM
 Left	 Left	 FORMAT	 SIZE
 OK	 OK	 TOP MENU	 OPT-TOOLS
 Right	 Right	 GOTO	 RDS
 Vol-	 Vol-	 D.MENU	 SETUP
 Down	 Down	 TEXT	 AV INPUT
 CH-	 CH- / Page-	 HOME	 ANGLE
 Mute	 Mute / Dimmer	 MENU	 INFO



