







 













 

 

 











Original	Sustituto
	 Power
	 Goto / Text
	 AV / Input / RDS
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--
	 Shift + Pause / Step /
	 Subtitle / EQ

Original	Sustituto
	 Info / Angle
	 Audio / Lang I/II
	 Fav / Marker / PC
	 Sound / Title
	 Up
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 Left
	 OK
	 Right
	 Shift + Play /
	 Setup / OPT /
	 Down
	 Zoom / Size
	 Menu / Home
	 Green / APP / Repeat





Original	Sustituto
AB	Yellow / YouTube / Repeat
I<<	I<< / Preset-
>>I	>>I / Preset+
PROGRAM	TV/Radio /
DISPLAY	Display / Media
<<<	<<< / Tune-
>>>	>>> / Tune+

Original	Sustituto

