 

 



 

 

 

 

 

 

 

 

 


 

 

 







Original	Sustituto
 Power	 Power
 Setup	 Setup / OPT /
 Digest	 Smart / List
 Lang	 Shift + Audio / Lang I/II
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 Zoom	 Zoom / Size
 4	 4
 5	 5
 6	 6
 A-B Repeat	 Yellow / YouTube / Repeat
 7	 7
 8	 8
 9	 9
 1/All Repeat	 Green / APP / Repeat

Original	Sustituto
 0	 0
 +10	 Guide / EPG / -/-
 Clear	 Exit / Cancel / Clear
 Play	 Play / Slow
 Up	 Up
 Stop	 Stop / Hold
 Left	 Left
 Select	 OK
 Right	 Right
 Pause/Step	 Pause / Step / Freeze
 Down	 Down
 Slow	 Shift + Play /
 F.BWD	 << / Tune-
 F.FWD	 >> / Tune+
 Prev.	 I<< / Preset-
 Next	 >>I / Preset+
 Subtitle	 Subtitle / EQ





Original	Sustituto
Angle	Info / Angle
Audio	Audio / Lang I/II
Volume+	Vol+
Program	+ Shift + TV/Radio / Program
Menu/PBC	Menu / Home
Title/Ret.	Sound / Title
Volume-	Vol-
Search	Red / Netflix / Search
Tv Sys	TV/Radio /
Tv Mode	Fav / Marker / PC
Mute	Mute / Dimmer

Original	Sustituto

