




 





















 

 




 

 



 









 

 



 
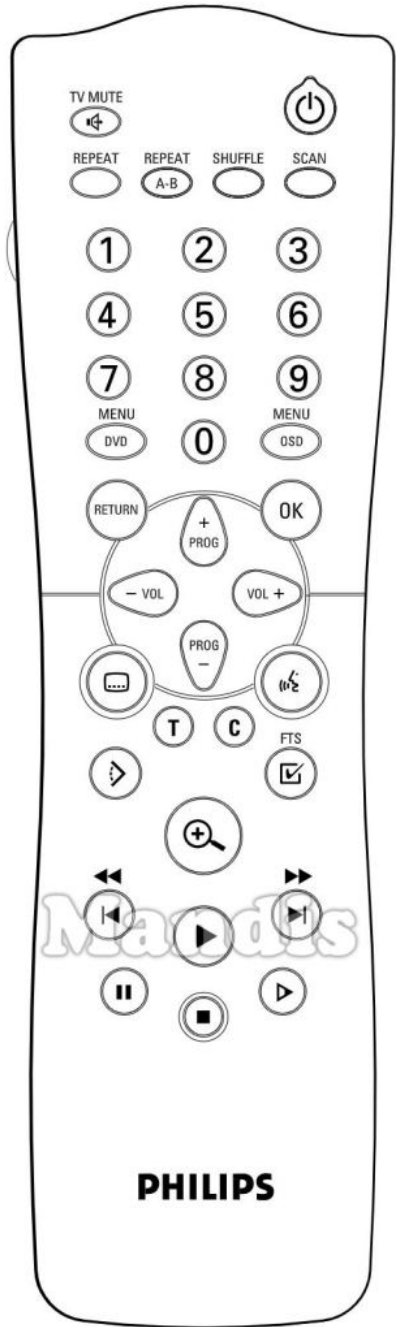


Original	Sustituto	Original	Sustituto
	Power		Power
	Repeat		Text
	A-B Repeat		Options
	Shuffle		AV
	Scan		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DVD Menu		D. Menu
	0		0
	OSD Menu		Menu

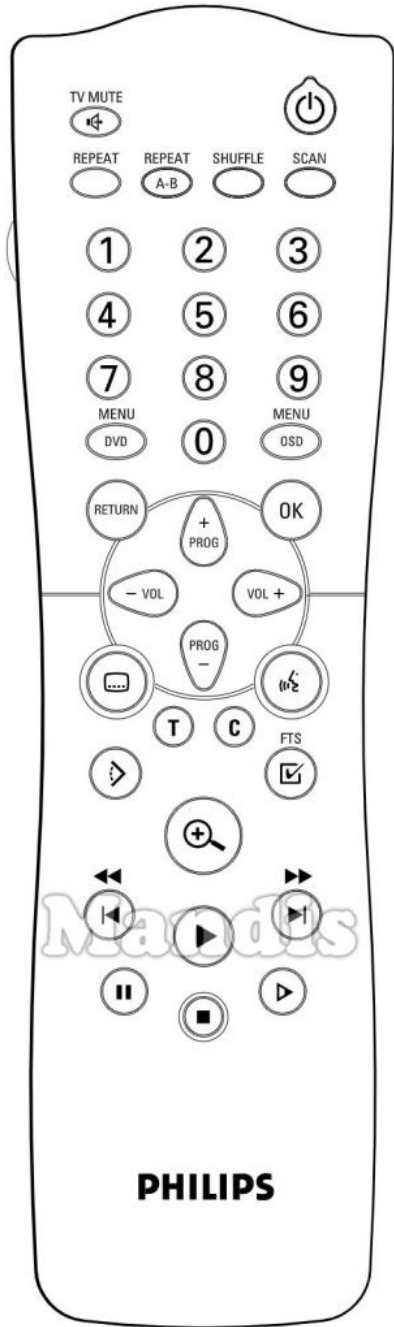
Original	Sustituto	Original	Sustituto
	Return		Back
	Up		Up
	P+		Ch +
	OK		Ok
	Left		Left
	Vol-		Vol -
	Right		Right
	Vol+		Vol +
	[...]		Subt
	Down		Down
	P-		Ch -
	Audio		Dual
	T-C		TV/R
	Angle		Format
	Zoom		Eject
	<<		<<
	I<		I<<





Original	Sustituto	Original	Sustituto
	Play		
	>>		
	>		
	Pause		
	Stop		





	Original	Sustituto		Original	Sustituto
	Power		Power		Down
	1		1		I<<
	2		2		I>>
	3		3		Stop
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Up		Up		
	OK		Ok		
	Vol -		Vol -		
	Left		Left		
	Vol +		Vol +		
	Right		Right		

