



Original	Sustituto
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
CH+ Tv	Shift + CH+ /
Drive Select	Smart / List
Input AV Tv	Shift + AV / Input / RDS
Vol- Tv	Vol-
CH- Tv	Shift + CH- /
1	1
2	2
3	3
Page/CH+	CH+ / Page+
4	4
5	5
6	6
Page/CH-	CH- / Page-
7	7

Original	Sustituto
8	8
9	9
FPlay	Shift + Green / APP /
Last View	Fav / Marker / PC
0	0
NET	Display / Media
Netflix	Shift + Red / Netflix /
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
i/Status	Info / Angle
Exit	Exit / Cancel / Clear
Guide	Guide / EPG / -/-





Original	Sustituto
Video Menu	D.Menu / Top
Left	Left
OK	OK
Up	Up
Right	Right
Function Menu	Menu / Home
Down	Down
Back/Return	Back / Return
Option	Setup / OPT /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Text	Text / Goto
STTL	Subtitle / EQ

Original	Sustituto
Prog/Check	Shift + TV/Radio / Program
Chapter	Picture / Format
Delete	AV / Input / RDS
Radio/TV	TV/Radio /
AD	Audio / Lang I/II
Time Slip	Sleep / Timer
-10s Manual Skip	Shift + Left
+60s Manual Skip	Shift + Right

