



 








 


 

 

 



 



 



 



 



 



 



 



 







 







Original	Sustituto	Original	Sustituto
 1	 1	 +10	 Guide / EPG / -/--
 Random	 Blue / Prime Video / Random	 Band	 Audio / Lang I/II
 2	 2	 Mode Tuner	 Sound / Title
 Repeat	 Green / APP / Repeat	 GEQ	 Smart / List
 3	 3	 Phrase/Repeat	 Yellow / YouTube / Repeat
 4	 4	 Pause/Set	 Pause / Step / Freeze
 CD Edit/Remain	 Fav / Marker / PC	 <</Down	 << / Tune-
 5	 5	 >>/Up	 >> / Tune+
 PRGM	 TV/Radio /	 Rec/Rec Mute	 Rec / Rec Mode
 6	 6	 Stop/Clear	 Stop / Hold
 7	 7	 <> Preset	 Play / Slow
 Timer	 Shift + Sleep / Timer	 Function	 Menu / Home
 8	 8	 Volume-	 Vol-
 Sleep	 Sleep / Timer	 Volume+	 Vol+
 9	 9	 Power	 Power
 Clock	 Info / Angle		
 0	 0		

