



Original	Sustituto
Mute	Mute / Dimmer
Power	Power
TV	TV/Radio /
Input	AV / Input / RDS
I/II	Audio / Lang I/II
List	Smart / List
Q.View	Setup / OPT /
Menu	Menu / Home
Up	Up
PR+	CH+ / Page+
Right	Right
Vol+	Vol+
Left	Left
Vol-	Vol-
OK/Stop	OK
PR-	CH- / Page-
Down	Down

Original	Sustituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
SSM	Guide / EPG / -/-
0	0
PSM	Fav / Marker / PC
Sleep	Sleep / Timer
*	Display / Media
[=]/Text	Text / Goto
[=x]/Update	Picture / Format
Blue	Blue / Prime Video / Random





Original	Sustituto	Original	Sustituto
TIME [=o]/Time	RETURN BACK Back / Return		
SIZE [=◆]/Size	SIZE ZOOM Zoom / Size		
[Yellow]	YouTube REPEAT A-B Yellow / YouTube / Repeat		
MIX [=]/Mix	CLEAR EXIT CANCEL Exit / Cancel / Clear		
HOLD [=+]/Hold	EQ SUBTITLE Subtitle / EQ		
[Green]	APP REPEAT Green / APP / Repeat		
REVEAL [=?]/Reveal	SURROUND Eject / Surround		
INDEX [=i]/Index	ANGLE INFO Info / Angle		
[Red]	NETFLIX SEARCH Red / Netflix / Search		
MODE [=M]/Mode	TOP MENU D.MENU D.Menu / Top		

