



Original	Sustituto
Power NET	+ Shift + Power
AMP Power	Power
Network	+ Shift + 1
CD	+ Shift + 3
Recorder	+ Shift + 2
Tuner	+ Shift + 6
Phono	+ Shift + 5
Coaxial	+ Shift + 4
Optical	+ Shift + 7
I<<	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Favorites Call	CH+ / Page+
Stop	Stop / Hold
Favorites Add	CH- / Page-
Input	+ Shift + AV / Input / RDS

Original	Sustituto
Source Direct	AV / Input / RDS
Volume+	Vol+
Info	Info / Angle
Mute	Mute / Dimmer
Volume-	Vol-
Queue	Display / Media
Option	+ Shift + Setup / OPT / Tools
Up	Up
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
1	1
2	2
3	3





Original	Sustituto
Power CD	+ Shift + Power
AMP Power	Power
Open/Close	Eject / Surround
Network	+ Shift + 1
CD	+ Shift + 3
Recorder	+ Shift + 2
Tuner	+ Shift + 6
Phono	+ Shift + 5
Coaxial	+ Shift + 4
Optical	+ Shift + 7
I<<	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Stop	Stop / Hold
Input	+ Shift + AV / Input / RDS
Source Direct	AV / Input / RDS

Original	Sustituto
Volume+	Vol+
Info	Info / Angle
Mute	Mute / Dimmer
Volume-	Vol-
Option	+ Shift + Setup / OPT / Tools
Up	Up
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5





Original	Sustituto
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Exit / Cancel / Clear
	TV/Radio /
	Blue / Prime Video / Random
	Green / APP / Repeat
	Shift + Mute / Dimmer

Original	Sustituto

