























 





 


















 
 












 








Original	Sustituto	Original	Sustituto
 Operate	 Power	 Input Select	 Smart / List
 Scanner On/Off	 TV/Radio /	 I<< Index	 I<< / Preset-
 Transmit	 Setup / OPT /	 Index >>I	 >>I / Preset+
 Pause/Still	 Pause / Step / Freeze	 Tracking/V-Lock-	 CH- / Page-
 Stop	 Stop / Hold	 Tracking/V-Lock+	 CH+ / Page+
 Still Adv	 Yellow / YouTube / Repeat	 Repeat	 Green / APP / Repeat
 <<	 << / Tune-	 Skip	 Blue / Prime Video / Random
 Play	 Play / Slow	 Audio Out	 Mute / Dimmer
 >>	 >> / Tune+	 Tape Select	 Zoom / Size
 Rec	 Rec / Rec Mode	 1	 1
 -	 Left	 2	 2
 Search	 Red / Netflix / Search	 3	 3
 +	 Right	 4	 4
 Display	 Display / Media	 5	 5
 Reset	 Back / Return	 6	 6
 Zero Stop	 Exit / Cancel / Clear	 Recording LP/SP	 Picture / Format
 AV Link	 AV / Input / RDS	 7	 7

















 









 





 


















 
 












 






	Original	Sustituto		Sustituto
SU-SA 8	8	USB 8	8	
MO-SA 9	9	BLUETOOTH 9	9	
MO-FR 0	0	HDMI-BAT 0	0	
--- -/--	-/--	GUIDE EPG ---	Guide / EPG / -/--	
TIMER REC	Timer Rec	GOTO TEXT	Text / Goto	

Original	Sustituto

 

 











Original	Sustituto	Original	Sustituto
 Operate	 Power	 Input Select	 Smart / List
 Scanner On/Of	 TV/Radio /	 I<< Index	 I<< / Preset-
 Transmit	 Setup / OPT /	 Index >>I	 >>I / Preset+
 Pause/Still	 Pause / Step / Freeze	 Tracking/V-Lock-	 CH- / Page-
 Stop	 Stop / Hold	 Tracking/V-Lock+	 CH+ / Page+
 Still Adv	 Yellow / YouTube / Repeat	 Repeat	 Green / APP / Repeat
 <<	 << / Tune-	 Skip	 Blue / Prime Video / Random
 Play	 Play / Slow	 Audio Out	 Mute / Dimmer
 >>	 >> / Tune+	 Tape Select	 Zoom / Size
 Rec	 Rec / Rec Mode	 1	 1
 -	 Left	 2	 2
 Search	 Red / Netflix / Search	 3	 3
 +	 Right	 4	 4
 Display	 Display / Media	 5	 5
 Reset	 Back / Return	 6	 6
 Zero Stop	 Exit / Cancel / Clear	 Recording LP/SP	 Picture / Format
 AV Link	 AV / Input / RDS	 7	 7





	Original	Sustituto	Original	Sustituto
	8			8
	9			9
	0			0
	-/--			Guide / EPG / -/--
	Timer Rec			Text / Goto

