























































 
























Original		Sustituto		Original		Sustituto	
	PP		Back / Return		P+		CH+ / Page+
	Mute		Mute / Dimmer		-/--		Guide / EPG / -/--
	(I)		OK		0		0
	Power		Power		P<P		Fav / Marker / PC
	[]		Display / Media		P-		CH- / Page-
	[=]		Text / Goto		Vol-		Vol-
	[↔]		AV / Input / RDS		Vol+		Vol+
	[+]		Smart / List		Colour+		Right
	1		1		Brighness-		Down
	2		2		Colour-		Left
	3		3		Brighness+		Up
	4		4		●		Setup / OPT /
	5		5		□		Stop / Hold
	6		6		X		Exit / Cancel / Clear
	7		7		[?]		D.Menu / Top
	8		8		◆		Zoom / Size
	9		9		[/ =]		Sleep / Timer

 







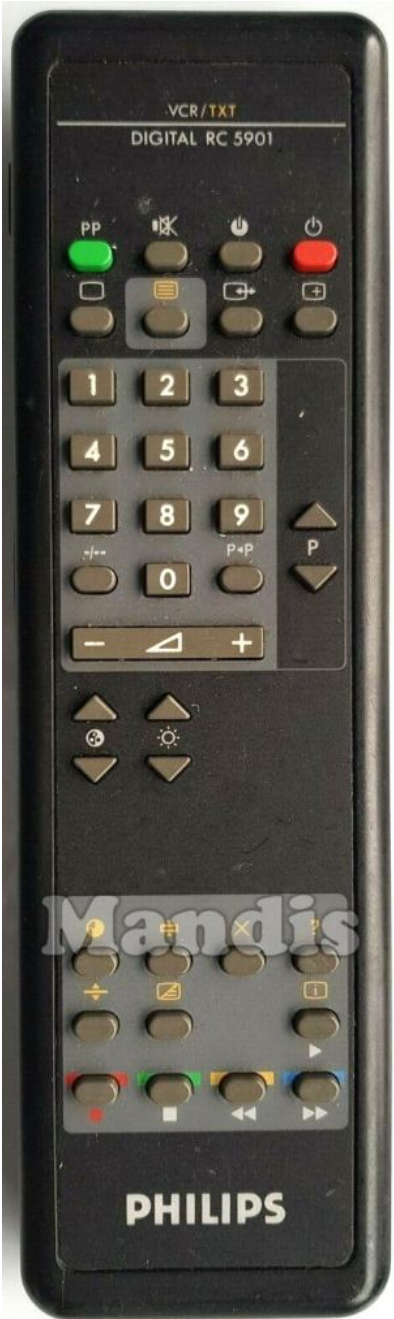































































Original	Sustituto	Original	Sustituto
	 Info / Angle		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		







Original	Sustituto	Original	Sustituto
	PP		Back / Return
	Mute		Mute / Dimmer
	(I)		OK
	Power		Power
	[]		Display / Media
	[↔]		AV / Input / RDS
	[+]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P+		CH+ / Page+
	-/--		Guide / EPG / -/--
	0		0
	P<P		Fav / Marker / PC
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	●		Setup / OPT /
	□		TV/Radio /
	X		Exit / Cancel / Clear
	?		D.Menu / Top
	Size		Zoom / Size
	[=]		Text / Goto
	[/=]		Sleep / Timer
	Play		Play / Slow
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-





Original	Sustituto
	 >> / Tune+

Original	Sustituto

