



Original	Sustituto
	 Power
	 TV/Radio /
	 Shift + 4
	 Shift + 2
	 AV / Input / RDS
	 Shift + Setup / OPT / Tools
	 Green / APP / Repeat
	 Display / Media
	 Exit / Cancel / Clear
	 D.Menu / Top
	 Setup / OPT /
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return

Original	Sustituto
	 Info / Angle
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 Stop / Hold
	 Vol+
	 Text / Goto
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4



