






















 






Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	PRE-CH
	Vol+
	Mute
	CH+

Original	Sustituto
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Text / Goto
	0
	Fav / Marker / PC
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Sustituto
	Vol-
	Guide
	CH- / Page-
	Shift + Red / Netflix /
	Menu / Home
	Shift + Blue / Prime
	TV/Radio /
	Up
	Picture / Format
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat

Original	Sustituto
	Vol-
	Guide / EPG / -/-
	CH- / Page-
	Shift + Red / Netflix /
	Menu / Home
	Shift + Blue / Prime
	TV/Radio /
	Up
	Picture / Format
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat





Original	Sustituto	Original	Sustituto
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Settings		D.Menu / Top
	Info		Info / Angle
	AD/Subt.		Subtitle / EQ
	Stop		Stop / Hold
	<<		<< / Tune-
	<<		<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>		>> / Preset+

